Find More Information

On your Phone

- Tutorials and videos: **Apps > Device Help**.

On the Web

- Tutorials and videos: **att.com/DeviceHowTo**

Give us a Call

- 800-331-0500
- 611 from any AT&T wireless phone

Accessories

- **att.com/WirelessAccessories**
- Visit your AT&T store

Coverage not available in all areas. Some features may require monthly access and/or per use charges. Visual and screen images are simulated. Portions ©2014 HTC Corporation. All rights reserved. HTC, the HTC logo, HTC Desire, and HTC BlinkFeed are trademarks of HTC Corporation. Portions ©2014 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks contained herein are property of their respective owners.

Printed in Taiwan P/N: 99HAAL000-00

HTC BlinkFeed™

Easily access content from popular websites and your social networks.

① From the Home screen, swipe right to access HTC BlinkFeed.
② In HTC BlinkFeed, swipe right to open the slideout menu.
③ Tap ⋮ > **Add content**.
④ Tap a category to see available content.
⑤ Select the content you want to add to the feed.

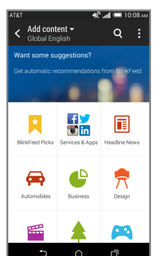

Turn off HTC BlinkFeed

① Press and hold a blank area to access customization options.
② Tap **Manage home screen pages**.
③ Swipe to the BlinkFeed panel, and then tap **Remove**.

Bluetooth, Wi-Fi, Mobile Hotspot

Pair a Bluetooth device

① Tap ⋮⋮⋮ > **Settings**.
② Under **Wireless & networks**, turn on Bluetooth using the **On/Off** switch.
③ Tap **Bluetooth**, and then tap **Scan for devices**.
④ Tap an available device to pair.

Connect to Wi-Fi

① Tap ⋮⋮⋮ > **Settings**.
② Under **Wireless & networks**, turn on Wi-Fi using the **On/Off** switch.
③ Tap **Wi-Fi**, and then choose a Wi-Fi network to connect to (secured networks require a passkey).

Enable Mobile Hotspot

① Tap ⋮⋮⋮ > **Settings**.
② Under **Wireless & networks**, tap **More > Mobile network sharing**.
③ Tap the Mobile Hotspot **On/Off** switch to turn it on.
The first time you turn on the Mobile Hotspot, you'll need to set it up.
④ Enter a hotspot name and enter a password, or use the defaults.
⑤ To help make your hotspot more secure, tap **Advanced settings**.
⑥ Tap **Next** and then tap **Done**.

Network

Your 4G LTE® wireless device will indicate which of AT&T's wireless networks you are connected to. A network indicator does not necessarily mean that you will experience any particular upload or download data speeds.

4G LTE — Connected to AT&T's 4G LTE network.

4G — Connected to AT&T's HSPA+ network. AT&T's HSPA+ network is capable of delivering 4G speeds when combined with enhanced backhaul. 4G availability is increasing with ongoing backhaul deployment.

E — Connected to AT&T's EDGE/2G network.

Actual data upload and download speeds depend on various factors, including the device, network utilization, file characteristics, terrain, etc. Learn more at: wireless.att.com/learn/articles-resources/wireless-terms.jsp, your AT&T Wireless Customer Agreement, Section 3.2 Where and How Does AT&T Service Work?

4G LTE not available everywhere. LTE is a trademark of ETSI. Learn more at att.com/network.

AT&T Services

AT&T DriveMode®: Automatically responds to incoming text and email messages when your vehicle is in motion.

AT&T Locker™: Cloud storage to store, sync, & share your photos, videos, and documents.

AT&T Keeper®: Keeper is a secure and easy-to-use app to manage and access your passwords and user names from your mobile devices and computers.

AT&T Navigator®: Get traffic updates, GPS navigation and turn-by-turn voice directions.

Mobile TV: Watch LIVE, on-demand and downloadable mobile TV including ESPN Mobile TV, Fox News and more.

YPmobile®: Use text or voice search to find businesses and events near your location.

Data rates may apply. Mobile TV and AT&T Navigator require a separate subscription. Mobile TV requires mobile broadband service. Service not available in all areas. Programming subject to blackout restrictions. Download and watch capability available for select content, requires Wi-Fi connection, and is available for viewing for limited time periods.

Quick Start

HTC Desire® 610

BC

Touch Screen and Navigation

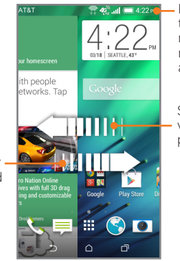

Web

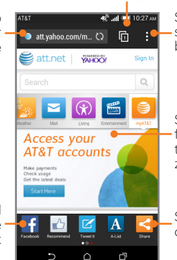
Open more browser tabs
Tap to go to another website
Show options, such as bookmarks
Slide two fingers on the screen to zoom in or out
Share and access more content
Swipe for more options

Personalization

① Press and hold a blank area to access customization options.

② Choose what you want to change, such as your Home screen wallpaper.

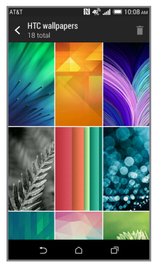

Manage Home screens

① Press and hold a blank area to access customization options.

② Tap **Manage home screen pages**.

③ Swipe to a panel, and then tap **Set as home** or **Remove**.

Contacts and Phone Calls

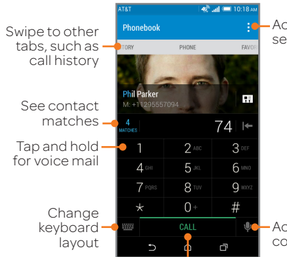
Swipe to other tabs, such as call history
Access phone settings
See contact matches
Tap and hold for voice mail
Change keyboard layout
Access voice commands
Dial number

Check your voicemail messages

① Open the **Phone** app.

② Press and hold the number 1 key on the keypad.

③ Enter your passcode, if you use one.

④ Follow the voice prompts.

Text Messaging

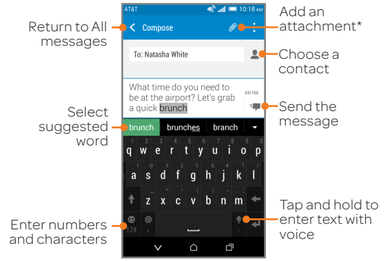
Return to All messages
Add an attachment*
Choose a contact
Select suggested word
Send the message
Enter numbers and characters
Tap and hold to enter text with voice

Please don't text and drive.

* Messaging rates apply.

Email

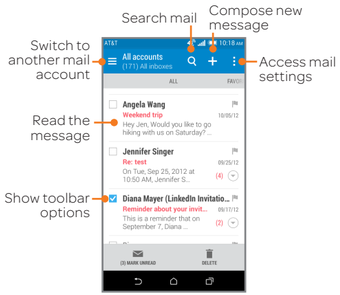

Send an email

① Open the **Mail** app.

② Set up the email account that you want to use.

③ On the email account inbox, tap +.

④ Fill in one or more recipients.

⑤ Enter the subject and your message.

⑥ To add an attachment, tap 📎.

⑦ Tap ✉. Or to send it later, tap ⋮ > **Save**.

Camera

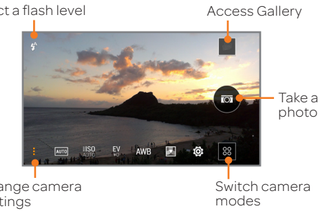

*Send a picture or video**

① Open the **Gallery** app.

② Browse an album, and then tap a picture or a video.

③ Tap **Share** to share via Bluetooth®, send by email, send as a message, or upload to a social network.

Change Camera mode

From the Viewfinder, tap ⊞ to change camera mode.

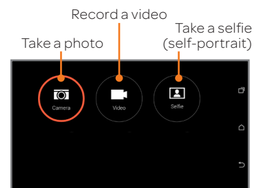

* Data charges may apply.